


Wrapped Loops

1.



Grab your wire with the tip of your chain nose pliers.

2.

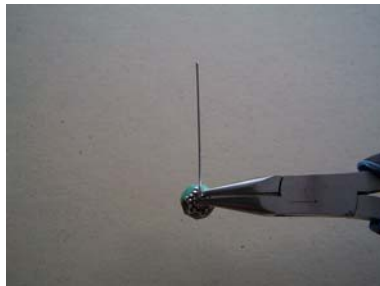

If, as in the picture, you are wrapping a head pin, be sure that the pliers are positioned next to the components, and that there is no excess “wiggle room”.

Taking your finger, push the wire away from you, making a 90° angle.

3.



Lay down your chain nose pliers.

With your round nose pliers, grab the piece at the top of the bend.

Make sure that the wire is pointed away from you.

4.



Grab the tip of the wire with your fingers and gently pull it towards you, wrapping the wire around the round nose pliers.

5.



Continue pulling the wire towards you and around the round tip of your pliers until the wire is pointing towards your waist.

6.



Reposition your pliers and then continue looping the wire around the tip of the pliers until you complete the circle.

7.



Lay down your round nose pliers, and grab the circle with your chain nose pliers.

8.



Wrap the wire end around the stem...starting with the first loop at closest to the circle, and working down towards the bead.

Make the wraps tight and close together.

9.



When you reach the bead, trim the excess wire, and "tuck" in the tail by gently squeezing it close to the stem with the tip of your pliers.